

Work with the best.

NEWSLETTER 40

March 2017

PB SWISS TOOLS

Dear Reader,

We all value reliability, both professionally and in our free time. If tools play a key role in fulfilling demanding tasks, then you can fully rely upon our quality tools.

Our branded products will provide you with this security. Your expectations of reliability will be fulfilled, and the confidence will be noticed and experienced with each and every turn.

Qualified and motivated employees develop and produce our products. Day after day, they see to it that the outstanding quality and the requirements for our brand are ensured. **Work with the best.**

With kind regards,



Eva Jaisli

CEO, Chief Executive Officer
e.jaisli@pbswisstools.com

GREATEST DEMANDS

When absolute precision plays a part, then PB Swiss Tools instruments are used. Numerous industries around the world rely on these high-quality Swiss tools.

By using them, you can even master any tricky situation, whether it be in development and manufacturing, in maintenance or in upkeep.

Immerse yourself in the exciting product videos of the Stadler Rail and the Jungfrau Railway, Swiss companies with the greatest demands on people and tools:

1. ElectroTools
2. Mallets
3. Hex key L-wrenches



View them now and subscribe to our YouTube channel

You will find all of our videos on our website under «Areas of application». Stay current and subscribe to our YouTube channel!



Discover now

[▶ pbswisstools.com](https://pbswisstools.com)

QUALITY HAND TOOLS

CROSS-HANDLES WITH SIDE DRIVE



Color Code: A system with color


The various color codings enable you to quickly find and assign the desired screw type.

Effective work

Fast as well as powerful: Two blades of different length allow both working methods.



Rapid turning

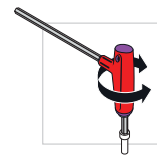

Powerful tightening and loosening of screws

Correct force transmission

The ergonomic shape fits perfectly in your hand and protects your wrist. The transverse handle with the high-quality Santoprene® covering remains slip-resistant, even if your hands are wet.

SLIDING HANDLES

Safety and flexibility


The sliding handle with three hexagonal profiles is particularly suitable for applying high torques. The sliding handle is adjustable and, with the double-sided end securing device, makes it possible to optimally use it for every screwdriving situation.

Everything is there


One tool for three different uses:

- Rapid turning
- Applying high torques
- Working on hard to reach fittings


Guaranteed safe to use and versatile.

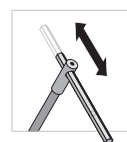

Rapid turning for hard to reach fittings

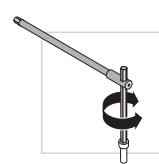

High torque


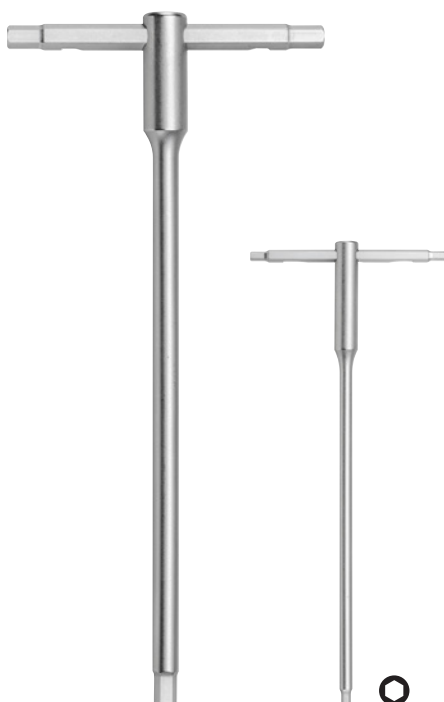


PRODUCT INNOVATIONS 2017

DEAD-BLOW MALLETS



Wear goggles when working with striking tools!

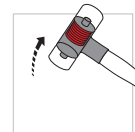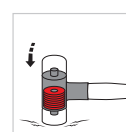

The disks are accelerated downward upon impact and absorb the recoil. This gives a full, accurate blow.

The dead-blow mallets with metal inserts made of copper and aluminum are new to the product range. Gentle strikes are used during assembly work, in sheet metal work, in straightening work, and during maintenance and servicing. They complement our range of mallets with polyamide inserts.

Guaranteed precise strikes

The design of the mallet heads is unique and allows full and precise strikes.

Recoilless

Because of the disks in the center piece, the mallet strikes the machining surface precisely, safely and in a targeted manner, even in case of weak strikes. By using disks instead of pellets, you get a more solid and durable mallet.

Ergonomic and robust

The mallet handles fit perfectly in your hand because their lengths are adjusted to the weights of the mallet heads.

The handles that are made of FSC® certified hickory wood can easily be replaced if necessary. All mallet inserts can be easily and quickly replaced, and are easy on the budget and the environment.

Find out more in our 2017 Catalog.



Discover now

► pbswisstools.com

PRODUCT INNOVATIONS 2017

PICKTOOLS



Thanks to the specially curved and rounded tips, parts can be positioned, probed or disassembled, even in hard to reach places.

All-purpose set of 5

The PickTools are particularly suitable for assembly, disassembly and cleaning work on motors, brakes, gearboxes, air conditioning systems, sealing elements and other small parts.

The decisive tip

The specially curved tip in the shape of a hook gives you a clear advantage.

Whether positioning, probing or dismantling, handling is very easy with the PickTool.



UNIVERSAL BIT HOLDER

Upgrade

The versatile universal bit holder is now available with the Swiss-Grip handle and offers you exceptional comfort.

Easy on your wrist

The two-component handle, with its pleasant feel and ergonomic shape, allows the targeted application of the desired torque, even when working with wet hands.

With the different blade lengths or handle shapes, you can even master challenging situations with flying colors.


PRODUCT INNOVATIONS 2017

POCKET TOOLS

Whether you're at home, in the workshop or on the road, our Pocket Tools are compact, high-grade tools, with which all basic tasks can be mastered. The handles are perfectly adapted to the particular inserts and fit perfectly in your hand.

Three new Pocket Tools complement our product range:

- Insider 1 with a new bit combination
- Insider Stubby with ratchet function
- Insider Mini two different assortments

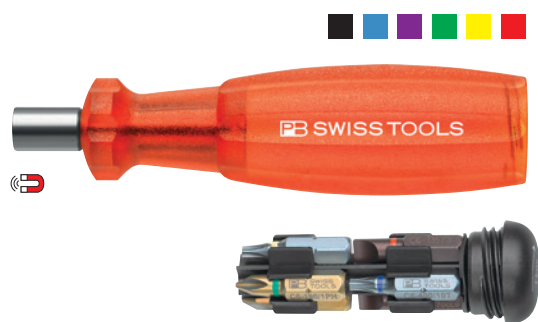

Insider 1 – the perfect companion when you're on the road

Our bestseller, with 8 integrated bits, is available in a new combination:

- Hexagon sockets in sizes 3, 4 and 5
- Slotted head bits in sizes 2, 3 and 4
- Phillips head bits in sizes 1 and 2

Space and weight saving. Available with short or long blades.



Insider Stubby – the little pocket tool for rapid screwdriving

The new integrated ratchet function on the short SwissGrip handle makes it possible to carry out screwdriving in difficult to reach places and, at the same time, it can be used for rapid turning.

Because it can be used with one hand and is reversible, this little pocket tool will never fail you. The handle, which is made of Santoprene®, makes it possible to generate a large amount of torque, even with wet hands.



Insider Mini – in two popular designs

The right tool at your fingertips for small screws. With the Insider Mini, you have three interchangeable blades, each with two different screwdriver tips, that are always close at hand.

The blades are securely held in the handle by a magnet. The sturdy handle has a handy clip for attachment so that you can take it anywhere.



Assortment 1: Home and hobby, precision mechanics



Assortment 2: Multimedia electronics, Apple® products



Discover now

► pbswisstools.com



International Trade Fair

CORE VALUES ARE OUR POLICY FOR QUALITY

SWISS MADE – A RECIPE FOR SUCCESS

Durability, precision and reliability: These core values define the policy for quality at PB Swiss Tools. Highly trained specialists are required to implement this policy. With internationally recognized vocational training in Switzerland, we have the ideal prerequisites to develop innovative solutions with internal and external experts.

In the case of PB Swiss Tools, Swiss Made stands for 100% development and production in Switzerland. In 2006, we highlighted this strategic success factor in our brand name.

We stick to our policy for quality; without exception, we carry out development and manufacturing in our plants in the Emmental region in Switzerland.

You can find out more about our success story on our website at www.pbswisstools.com/qr/milestones/en



Discover now

► pbswisstools.com

1942



1950



1959



1971

PB BAUMANN

1981



1997

PB BAUMANN 
SWISS QUALITY TOOLS

2001

PB BAUMANN 
DAS SCHWEIZER QUALITÄTSWERKZEUG

2006

PB SWISS TOOLS

2011

PB SWISS TOOLS

Internationalization: Swiss Made as a recipe for success